

# Vaporella®

New concept

330

PATENT PEND



CE

 Politi®

 
 
 
 
 
**ENGLISH**

- 1) Boiler cap
- 2) Illuminated ON/OFF switch
- 3) Tank (Fig. 1)
- 4) Handgrip
- 5) Steam pressure indicator
- 6) Iron rest
- 7) Iron temperature control
- 8) Flex (Steam and electric)
- 9) Current supply cable
- 10) Steam release switch
- 10a) "Iron heating" indicator light
- A) KalFilter

Polti S.p.A. reserves the right to change equipment or accessory specification without prior notice.

**PLEASE READ  
THE FOLLOWING BEFORE USE**

- Before using your Vaporella carefully read these usage instructions.
  - Before connecting Vaporella to the mains make sure that the current is the same as indicated for the machine and that the plug is an earthed plug.
  - Do not put any detergent or chemical substance in the water tank.
  - Do not place the appliance in water or in anyother liquids.
  - Do not touch the appliance with wet hands or feet whilst the appliance is connected to the mains.
  - Never leave the appliance unattended whilst it is connected to the mains.
  - Do not allow Vaporella to be used by children or by people who are not familiar with the usage instructions.
  - We recommend that the appliance is disconnected from the mains whenever it is not in use.
  - Do not leave the appliance exposed to wind or rain.
  - Do not lay the hot appliance on surfaces sensitive to heat.
  - Do not use electric extension leads that are not authorized by the manufacturer, as they may cause damage or fire.
  - Never direct the jet of steam towards small particles of debris without first protecting the user's eyes.
  - Do not direct the steam jet at people or animals. Danger of burns.
- ATTENTION:** If you iron sitting down, do not place your legs under the ironing board, steam can cause burns.
- **WARNING:** to avoid problems created by lime-scale, it is essential to use KalFilter jug.

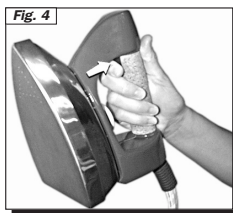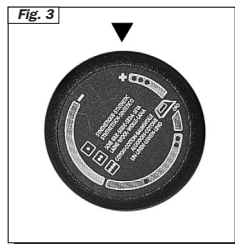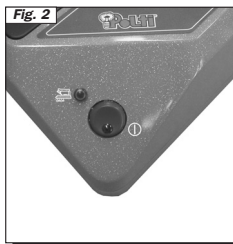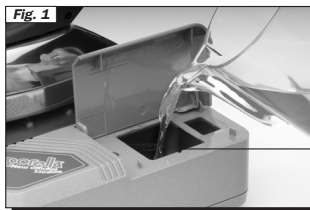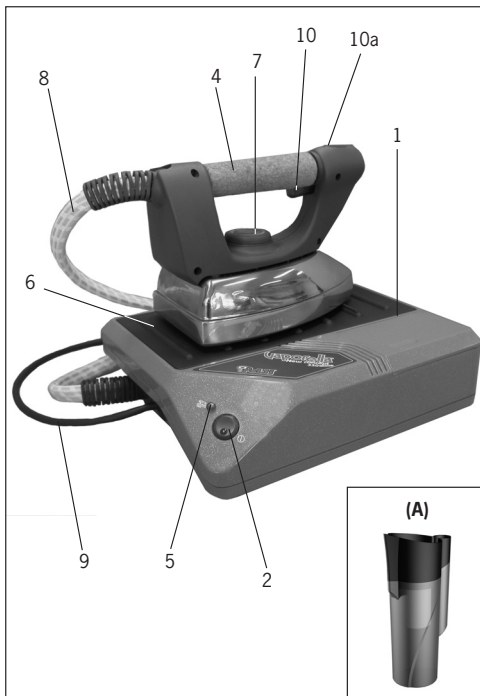

ENGLISH

It is necessary to keep the unit in horizontal position during operation.



**IMPORTANT**

**Before leaving our factory all our products are rigorously tested.**

**However, your VAPORELLA may contain some residual water in the boiler from the factory tests.**

**PREPARATION FOR USE**

- Remove the self-refilling tank cap (1) (Fig. 1) and fill the tank with 600 cc of water, making sure it does not overflow.

Water by its nature contains magnesium and mineral salts which form into limescale. To avoid this residue causing problems to your unit, we recommend that you always use this special jug KalFilter with anti-limescale filter, which is provided with your appliance. Thanks to its special filter made up with a mixture of two resins this jug is the ideal solution to the problem of limescale allowing you to change water straight from the tap into water that is demineralized and silicon-free. In this way you can prevent the incrustations and protect the components of your unit.

Constant use of the jug extends the life to your appliance and you will always have at your disposal a clean jet of steam. To use the jug correctly, please read carefully the instructions provided with this item.

- Connect the cable plug to an earthed power supply of the correct voltage.
- Press the illuminated ON/OFF switch (2); the steam pressure indicator (5) and the "iron heating" indicator light (10a) will light up.
- The sound emitted on switching on your appliance and periodically during use, is due to the water refilling system and is quite normal.
- At first steam request, or about 2 minutes after the last request, you will experience a delay in steam delivery because steam inside the heat exchanger is excessively rarefied. This is normal and no longer happens once the equipment has been used a number of times. Press the steam release switch (10) for some seconds till steam is released.

**INSTRUCTIONS FOR USE**

**STEAM IRONING**

- Set the iron temperature to the "COTTON - LI-

NEN" steam position (fig. 3), by turning the knob (7). For steam ironing (but not dry ironing) all types of fabric can be ironed at this temperature.

- Wait for the steam pressure indicator light (5) and the "iron heating" indicator light (10a) to go off (about 3 minutes). Push button (10) on the iron to release bursts of steam from the holes on the soleplate. Release the button and the steam will stop (fig. 4).

**NOTE:** during initial operation of the iron, a few drops of water mixed with steam may come out of the soleplate until the temperature stabilises. It is advisable to direct the first jets of steam onto an old cloth until a uniform stable jet of steam is obtained.

**DRY IRONING:** For DRY ironing (without steam), adjust the temperature by turning the knob (7), setting it to the temperature required for the fabric, as shown on the rotating indicator. When dry ironing, be careful NOT TO PRESS THE STEAM RELEASE BUTTON (10) on top of the iron, otherwise water may leak from the soleplate of the iron.

**FILLING THE TANK**

If no steam is released when requested, and at the same time a higher-pitched noise is heard from the pump, this signifies that the tank is out of water.

To keep on working, simply restore the water level in the self-refilling tank as described in the "Preparation for use" paragraph.

It is necessary to refill the tank with water before it becomes empty.

**IMPORTANT**

- Do not leave the iron unattended whilst connected to the mains.
- Iron only on heat resistant surfaces and on surfaces that allow the steam to escape e. g. mesh ironing boards.
- The lights (5) and (10a) go on and off during operation, this is perfectly normal, indicating that the electric resistances are operating to maintain the New Concept system at a constant temperature and is quite normal.
- If no steam is released from the iron, check that: the switch (5) is lit up.
- If repairs or replacement parts are required, use only original Polti replacement parts.
- The appliance is fitted with a safety thermostat, which should only be replaced by an authorised technician.
- If it is necessary to replace the power supply cable, please refer to the nearest Polti authorised service centre, since the use of a special tool is

necessary.

- If you accidentally drop your iron, you should have it checked by an authorized Polti Service Centre because some internal malfunctionings might have occurred, limiting the safety of the product.
- **In the case of breakdown or malfunction do not attempt to repair the appliance yourself but refer to your nearest authorised service centre.**

**CARE OF YOUR VAPORELLA**

- **Before attempting any maintenance operation, be sure to always disconnect the appliance from the mains.**
- To clean the body of the appliance, simply use a moist cloth. Do not use solvents or detergents which may harm the body material.

**Polti declines liability for any damage or accident derived from any use of Vaporella which is not in conformity with the instructions contained in this booklet.**

**FOR YOUR OWN SAFETY READ FOLLOWING INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING TO CONNECT THIS UNIT TO THE MAINS.**

 
**MAINS (AC) OPERATION (only U.K.)**

This unit is designed to operate on 240V, 50 Hz current only. Connecting it to other power sources may damage the unit.

**WARNING - This appliance must be earthed.**

This appliance may be fitted with a non rewirable plug, if it is necessary to change the fuse in a non rewirable plug the fuse cover must be refitted. If the fuse cover is lost or damaged, the plug must not be used until a replacement, available from the appliance manufacturer, is obtained. It is important that the colour of the replacement fuse cover corresponds with the colour marking on the base of the plug.

If the plug requires to be changed because it is not suitable for your socket, or becomes damaged, it should be cut off and an appropriate plug fitted following the wiring instruction (below). The plug removed must be disposed of safely as insertion into a 13A socket is likely to cause an electrical hazard.

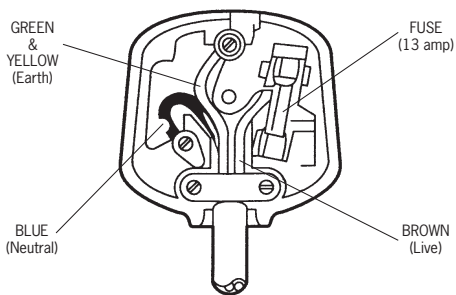

**IMPORTANT**

This wires in this mains lead are coloured in accordance with the following code.

- Green-and-yellow: Earth
- Blue: Neutral
- Brown: Live

As the colours of the wires in the mains leads of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked with the letter "E" or by the earth symbol or green-and-yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter "N" or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter "L" or coloured red.